

# Installation Manual

## AC/DC power supplies

### PSE60, PSE100



PSE60  
PSE100

Option T3



PSE with option N wall DIN and chassis mounting



H15-S connector  
Connector holder for option N

Schulz-Electronic GmbH  
Dr.-Rudolf-Eberle-Straße 2  
D-76534 Baden-Baden  
Fon +49.7223.9636.0  
Fax +49.7223.9636.90  
vertrieb@schulz-electronic.de  
www.schulz-electronic.de

Polyamp AB  
Box 925  
191 29 SOLLENTUNA  
Sweden

[www.polyamp.com](http://www.polyamp.com)  
info@polyamp.se  
Tel: +46 859469300  
Tel: +46 859469305

EU VAT no SE556103276301  
DUNS no 35-430-3372  
CAGE S4231  
NCAGE S4231

## **Warranty**

All Polyamp DC/DC converters are warranted against defective material and workmanship. This warranty is valid for 24 months from the date of delivery. We will repair or replace products which prove to be defective during the warranty period. The warranty is valid only if the converter is used within specification.

## **Manual**

This manual is as complete and actual as possible at the time of printing. However, the information may have been updated since then. Polyamp AB reserves the right to make changes in this manual without notice.



The exclamation point within an equilateral triangle is intended to alert the user to presence of important operating and maintenance instructions in the literature accompanying.



The lightning flash with arrowhead, within an equilateral triangle, is intended to alert the user to presence of uninsulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

### **Caution!**

To prevent the risk of electric shock, do not open enclosure. No serviceable parts inside. Refer servicing to qualified service personnel only.



We supply a separate declaration of conformity within our shipment that mainly refers to the Low voltage directive and EMC directive.



## **CONTENT**

1	Before installation .....	4
1.1	Cable and pin dimensioning.....	4
1.2	Inrush current limit .....	4
1.3	Input Fuse.....	4
2	Installation.....	5
3	Parallel connection .....	6
3.1	Series diode on the output, option C.....	6
3.2	Series diode with series resistor, option CR .....	6
3.3	Output under voltage alarm .....	6
3.4	Connecting systems in N+1 configuration.....	7
3.5	Connecting converters in parallel on the output .....	7
3.6	Adjusting output voltage when units are paralleled on the output.....	8
4	Multiple loads at the output.....	8
4.1	Short circuits .....	8
5	Output voltage sense, option S.....	9
6	Output over voltage protection OVP.....	9
6.1	Standard feature .....	9
6.2	OVP option A .....	9
7	Output low voltage alarm.....	9
7.1	Logic signal alarm.....	10
7.2	Relay output alarm, option B .....	10
8	Higher isolation voltage, Option E2.....	10
9	Isolation voltage test.....	11
9.1	DC isolation test output to case .....	11
9.2	AC isolation test output to case, option E2.....	11
9.3	DC isolation test input to output and input to case .....	12
9.4	AC isolation test input to output and input to case .....	12
10	Trouble shooting .....	13
10.1	There is no output voltage.....	13
10.2	Fault report .....	13

### 1 Before installation

Before installation, please read this section and minimum section 2. This installation manual shall also be read together with the datasheet of the product. Download the datasheet from [www.polyamp.com](http://www.polyamp.com) and check the File archive where in section Datasheet you will find PSE100AC.pdf .

If any problem occurs during installation please check *section 10 Trouble shooting*.

The product is labelled as below example:

<p><b>PSE100AC24</b> Input range: 176-264Va.c. 0.71 A AC frequency: 48-420Hz Output: 24 Vd.c. 4.2 A Option: L, C</p>
--

The power supply type name consists of model name PSE60 and PSE100 followed by input code and output voltage. Two examples:

- **"Type: PSE100AC24"** has input code **"AC"** and nominal output voltage **24 Vd.c.**
- **"Type: PSE60ACW12 "** has input code **"ACW"** and nominal output voltage **12 Vd.c.**

The **Options** are block letters separated by comma(.). You will find explanation within this manual what the letter code means. The **input** states the nominal input voltage and **maximum input current** at any conditions. It means the output is adjusted +10% above nominal voltage and close to the current limit, which is the stated output current +5% and a lowest input voltage level.

**Input range** is the input range that the unit can operate normally.

**Output** indicates the nominal output voltage and the rated current.

**The output is current limited** with a so called rectangular characteristic. When the current limit is reached, which is adjusted to +5% of above mentioned nominal output current, this is the maximum current that will

continuously flow. The output voltage drops very quickly down towards zero volt (depends on the series resistance of the load circuit as the unit can be regarded as a constant current generator at over current condition). We have no time limit on over current condition.

**Temperature range** is the rated operation temperature at 100% load condition.

Input, output and case are galvanically separated from each other.

This is a **Class I insulation system**, which is dependent of correct earth connection on the input. All outputs are insulated from case with minimum 2000 Vd.c.

**Series number** is stamped on the panel under the connector

#### 1.1 Cable and pin dimensioning

The PSE series is using a DIN 41621 H15 connector intended for 3HE Euro format mounting. Each pin has a continuous current rating of 15 A @+55°C and 12 A @+70°C ambient temperature.

The **Uout** pins are internally parallel connected and can therefore supply more current or two different loads. If the unit is equipped with sense option S this must be connected to one of the loads or a distribution point.

#### 1.2 Inrush current limit

The input capacitors are charged through an NTC resistor to reduce the input current during start up. All models has an "output soft start" that do not increase the input current above the unit rated current during start up (approx. 0.1s).

#### 1.3 Input Fuse

There is a fuse inside the the power supply. If that fuse blows it's an indication of a fault in the unit. Replace with new unit and send it back for repair, *see section 10*.

### 2 Installation

The converter is designed to be mounted in a 3U 19" sub rack unit. Otherwise a location only accessible for service, which meets the demand of EN60950 regarding fire enclosure, voltage hazard protection and mechanical strength shall be used. With option N, wall mounting set you can mount the converter in any direction on a wall or with optional mounting clips on DIN rail TS35. The converter is convection cooled and in order to get sufficient cooling there shall be a free air around the converter. If this is not possible, we recommend the use of an external fan.

On 5 V single output voltage the case temperature might increase +20 °C above ambient temperature. An optional extra cooler, called T3, can be provided on 5 V versions to lower the operating temperature or increase the operating temperature range. The extra cooler is called T3.


Note that the expected life of the converter is dependant on converter temperature. As a rule of thumb, for every 10 °C that the temperature is lowered the expected life is approximately doubled. It is therefore crucial to cater for good ventilation and if possible to reduce ambient temperature.

To meet the EMC specifications in the enclosed "declaration of conformity" use twisted-pairs for connecting input, output and alarm. Shielded cables are not necessary.

If the converter supplies a DC-motor, we recommend an external parallel diode at the motor poles to protect against reverse voltages.

#### Installation in a 19" sub rack :

1. Check the *pinout with Figure 1*. Connect the protective earth pin 32. This provide safety against electrical shock and is required to achieve EMC performance according to the declaration of conformity.
2. Be aware that if the sense option "S" is provided the sense must be connected to the sensing point and cannot be left open, *see Section 5 page 9*.
3. Plug in the unit. Read from bullet 3 below.

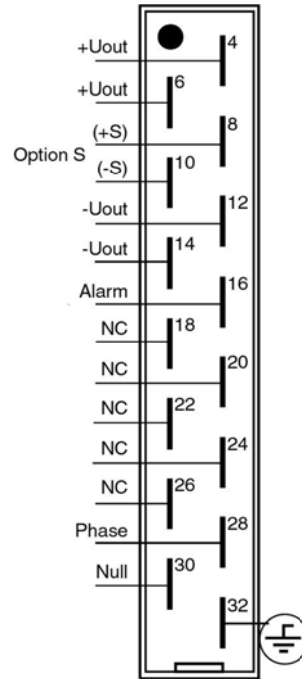

**Figure .1** Pin out DIN41612 H15 connector.

#### Installation with wall mounting panel option N:

1. Check the *pinout with Figure 1*. Connect protective earth to pin 32. This provide safety against electrical shock and is required to achieve EMC performance according to the declaration of conformity.
2. Connect the output. Be aware that if the sense option "S" is provided the sense must be connected to the sensing point and cannot be left open, *see Section 5 page 9*. Bundle the output cables together, separate from input.
3. The converter output is short-circuit proof by a constant current limit which works unlimited in time. Therefore there is no need to fuse the load (unless you use multiple loads, see below). The current limit is fixed to 105% of nominal output current.
4. Options and features
  - If the converter is to be connected in parallel at the **output**, please consult section 3 *Parallel connection on this page*.
  - If you use multiple loads, please consult section 4 *Multiple loads at the output on page 9*.
  - Check section 6 for the *output over voltage protection page 10*.

- If you intend to use alarm feature, please consult *section 7 Under voltage Alarm on page 10*.
5. Connect the input cables. Bundle input cables together separated from the output cables.
  6. Switch on the input voltage.

### **Beware of hazardous voltages!**

**The output voltage** can be adjusted between  $\pm 10\%$  of nominal output voltage with the potentiometer marked V.ADJ on the front panel. Clockwise turn increases the output voltage. The potentiometer has 15 turns. If you have connected units in parallel on the output, the procedure of adjusting the output voltage is described in “Adjusting output voltage when units are paralleled on the output” *on page 7*.

## **3 Parallel connection**

If a redundant power supply system is requested, two or more converters can be connected in parallel. To achieve redundancy the number of converters must be dimensioned to carry the whole load even if one converter is faulty. The option C or CR series diode on the output must be provided. Connect your load to the + output after the series diode (cathode).

Another reason for connecting two or more converters in parallel is to get more power. The option C must be provided and use the output with series diode. When the series diode C or CR option is used the *Sense option S*, *see section 5 page 9*, cannot be used.

### **3.1 Series diode on the output, option C**

A series diode is necessary if the output is connected in parallel with another power supply or if you require redundant operation. If a converter breaks down with an internal short-circuit on the output and other converters are connected in parallel on the output, the broken unit will short-circuit the others if the series diode is not used. This might cause excessive heat or even fire in the faulty unit.

The series diode protects the converter output from external voltage sources.

If the series diode is used, we recommend to use the alarm function option B alarm circuit. The alarm relay will switch to “ALARM” on the faulty unit if one power supply breaks down in a redundant power supply system. Otherwise there will be no alarm indication from a faulty power supply unless all units are in current limit.

### **3.2 Series diode with series resistor, option CR**

This option is an extension of 3.1 Series diode. When several PSE units are connected in parallel with so called “hot plug in” in 19” sub-rack, a built in series resistor and series diode is provided that will automatically balance the current between units. The series resistor will provide the Ud function described in *section 3.4 and Figure 4*. Thus no special cable arrangements are needed with this CR option.

### **3.3 Output under voltage alarm**

If one DC/DC converter fails in a redundant power system an alarm signal should be detected.

The PSC has a logic open collector alarm to provide a logic signal. An optional relay dry contact output, *see section 8 page 10*.

The *figure 2, next page* shows a N+1 system with two units for the load and one for the redundancy. Each Power supply has a built in; series diode (C), balancing resistor (R) and alarm Relay option B. The alarm is cascade connected.

With the CR option a hot plug-in can be achieved if the output voltage is correctly adjusted. Use instruction *section 3.6 -3 below*.

### 3.4 Connecting systems in N+1 configuration

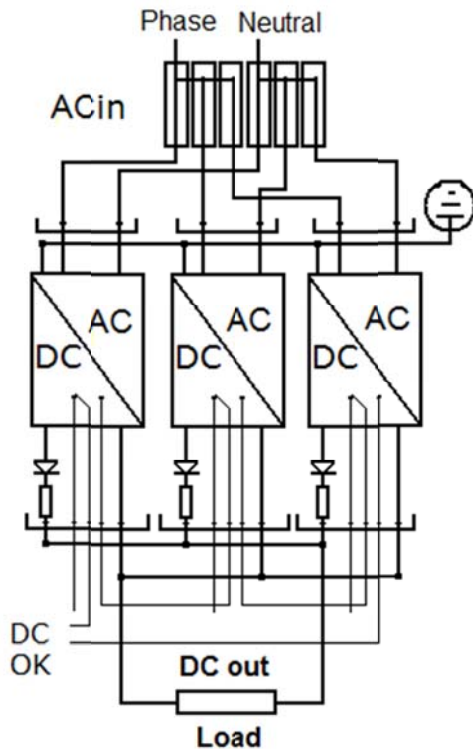


Figure 2. An N+1 system with two units for the load and one for the redundancy.

### 3.5 Connecting converters in parallel on the output

The expected life of the converter is dependant on converter temperature. It is therefore important for paralleled unit to share the load as equal as possible to reduce the converter temperature. To achieve good current sharing the converters must have separate cables to the load. The cables should be dimensioned to have a voltage drop,  $U_d$ , between the converter and the load at maximum current capacity, see Figure 3 and Figure 4.

- When the series diode is used, which we recommend, the voltage drop should be approximately 1.0% of nominal output voltage (to also compensate for the negative temperature coefficient of the diode).
- When the series diode is **not** used, **this is not recommended**, the voltage drop should be approximately 0.5% of nominal output voltage.

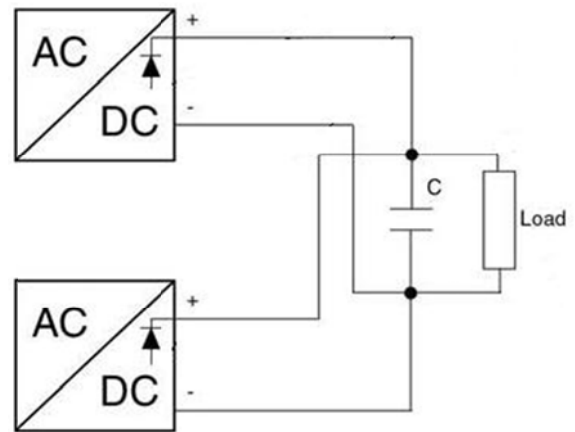


Figure 3. Parallel connection, with optional capacitor.

Note that the voltage drop affects the load regulation (the voltage at the load), see Figure 4.

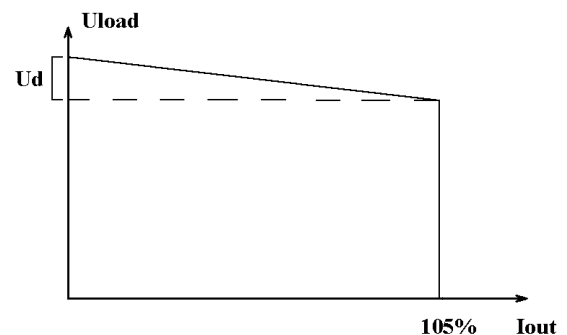


Figure 4. Load regulation with voltage drop  $U_d$  between output and load.


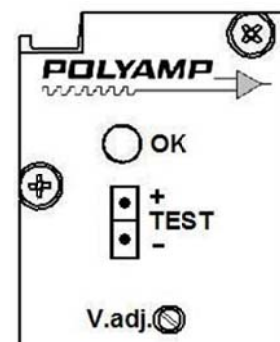


Figure 5. Output voltage measurement point before the series diode accessible from frontpanel.

### 3.6 Adjusting output voltage when units are paralleled on the output

1. Connect and start all converters according to *Installation* on page 5. We recommend using the series diode and separate cables as mentioned above in 3.5 *Connecting converters in parallel on the output*.
2. Measure the voltage at the load. Connect voltmeters as showed in *Figure 6*. If you have only access to one voltmeter you must move it around to make the adjustments.
3. To **increase** the output voltage. Increase the output voltage by turning the potentiometer marked "V.ADJ" clockwise on the unit with the lowest output voltage until you reach the desired voltage at the load or until the output voltage does not increase anymore (as the unit is in current limit). To find the unit with the lowest output voltage you can measure the voltage difference before the series diode, as in *Figure 6*. Repeat, until you reach the desired output voltage at the load.
4. To **decrease** the output voltage. Decrease the output voltage by turning the potentiometer marked "V.ADJ" counter clockwise on the unit with the highest output voltage until you reach the desired voltage at the load or until the output voltage does not decrease anymore (as the other units supply all current). To find the unit with the highest output voltage, measure the voltage difference before the series diode, as in *Figure 6*.

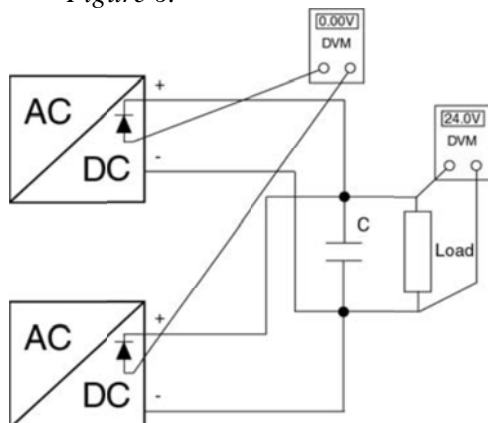


**Figure 6.** Adjusting output voltage measure at +Test or pin 8 on the H15 connector.

5. Repeat from 3. until you reach the desired output voltage at the load.
6. To achieve good current sharing, adjust all converters so that the voltage difference before the series diode is 0.00 V between all units that are connected in parallel and so that the voltage at the load is still the desired.

### 4 Multiple loads at the output

If you are using several loads, we recommend fusing them separately with fast acting fuses. Some considerations regarding short circuits should be taken. See below.

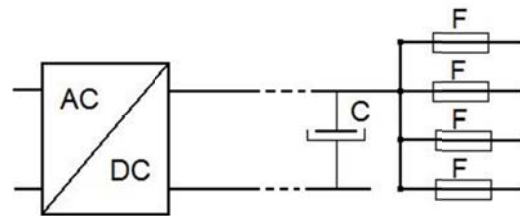

**Figure 7.** Connecting multiple loads.

#### 4.1 Short circuits

1. If there is a short circuit in one branch and the total current in **all** branches **does not exceed 105%** of the nominal current of the converter (see label on front panel), the output voltage will not be affected. The time for the fuse to blow can be calculated from the data sheet of the fuse if you know the short circuit current through the fuse.
2. If there is a short circuit in one branch and the total current in **all** branches **does exceed 105%** of the nominal current of the converter, the output voltage will drop until the fuse is blown. Depending on the impedance of the short circuit (whether it is abrupt or merely an overload) and the resistance of the load cables, the effects of a short-circuit will vary.
3. Long cables reduce short circuit currents, resulting in longer delay until the fuse is blown and hence an increased voltage dip. Light overload does not necessarily result in a blown fuse.
4. To reduce the voltage drop at short circuit and if any branch has more than



approximately 30% of the power supply total output current, a large external capacitor is recommended. Such a capacitor will supply the peak current needed to blow the fuse, see *Figure 7*.

- To calculate the capacitor needed, use the following formula:

$$C = 1.2 \times (IS \times \Delta t) / \Delta U$$

Where

1.2 = Safety margin

IS = Short-circuit current through the fuse.

$\Delta t$  = Time before the fuse blows (see data sheet on the fuse).

$\Delta U$  = Acceptable voltage dip before the fuse blows.

### Example:

You have a 1 A fuse with fast characteristic and the short circuit current is 10 A. The datasheet gives you that  $\Delta t = 10$  ms. The output voltage is 24 V, and you can accept 10% voltage drop =>  $\Delta U = 24 \times 0.1 = 2.4$  V.

The capacitance you need is:

$$C = 1.2 \times (IS \times \Delta t) / \Delta U = 1.2 \times 10 \times 0.01 / 2.4 = 50,000 \mu F$$

Select a capacitance with a rated voltage of at least 115% of nominal output voltage of the converter. Repeat this calculation for all branches and choose the highest capacitance value.


It is sometimes difficult to estimate the short-circuit current when the nature of a fault is unknown. In this case a voltage dip might appear under some shortcircuit conditions even with a large capacitor present. If a voltage dip is critical in one branch it is recommended to use a separate Power supply or DC/DC converter supplying this branch.

## 5 Output voltage sense, option S.

The remote voltage sense is used to improve the regulation at the load. The voltage regulation is moved to a point outside the converter where the sense is connected. Longer sense leads than 3 m is not recommended. The voltage difference between the load and the converter should not

be larger than the output voltage range. Use twisted sense wires, see *Figure 8*.

The sense leads must always be connected to respective pole, even if not used externally. The sense cannot be used in a paralleled system, described in *section 4*.

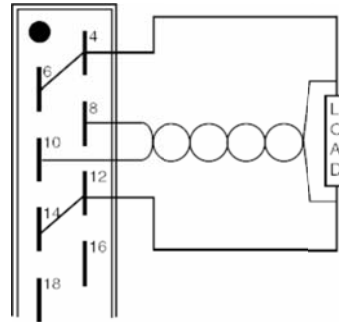

*Figure 8. Remote sense connection.*

## 6 Output over voltage protection OVP

### 6.1 Standard feature

In case the regulation circuit fails on the output, a secondary regulation circuit limit the output voltage level. The circuit also protects the converter output from external voltages. The trigger voltage is set to 115% to 120% of the nominal voltage. The circuit is active as long as the over voltage condition remains.

### 6.2 OVP option A

An independent circuit using a SCR thyristor is used as over voltage protection. When activated it short circuits the output. Reset a triggered OVP by switching off and on the input voltage.

The circuit protects the converter from high external voltages as well as regulation failures of the unit. The OVP trigger voltage is set to 115% to 120% of the nominal voltage. OVP is standard on all 5 V master outputs and will trigger at max. 6.2 V.


## 7 Output low voltage alarm

The alarm circuit monitors the output voltage and trigger when the output voltage become below -10% of nominal output voltage.

### 7.1 Logic signal alarm

This standard feature consist of an open collector alarm in reference to the output voltage, *see Figure 9*.

The voltage supply to the alarm can be taken from the converter output. It cannot be combined with the alarm relay option.

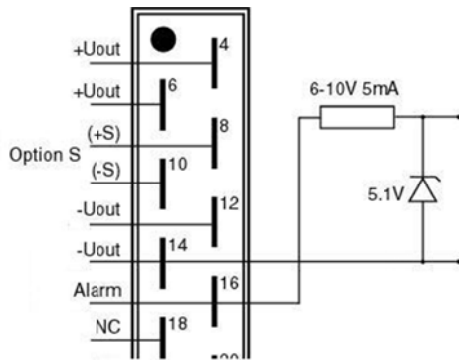

**Figure 9.** UL Alarm with 5V logic signal.


### 7.2 Relay output alarm, option B

The alarm has dry contact output with selectable NO, NC function. The relay output is insulated from both input and output 2.5 kVa.c., *see Figure 11*.

The relay is rated 30V 0.5A (a.c. & d.c.). For higher voltage/current relay rating please contact Polyamp.

The alarm relay can be connected in two ways:

1. Normally Open (NO).  
Connect twisted-pair (0.25 mm<sup>2</sup> - 0.5 mm<sup>2</sup>) from centre pin of the removable alarm connector and connector pin marked "NO".
2. Normally Closed (NC).  
Connect twisted-pair (0.25 mm<sup>2</sup> - 0.5 mm<sup>2</sup>) from centre pin of the removable alarm connector and connector pin marked "NC".

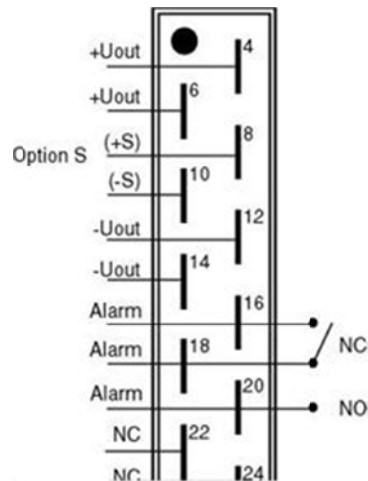

**Figure 10.** UL alarm with internal relay, option B. Relay symbol shows Alarm state.

## 8 Higher isolation voltage, Option E2

**E2** is 2 to 2.5 kVa.c. 1 minute between output and case. The emission level is increase to level A.

### 9 Isolation voltage test

Each converter has been isolation tested in factory before delivery. Please note that consecutive insulation test damage the Y-capacitors and affect the EMC performance of the unit. We ask you therefore to minimize or completely avoid such test.



**Warning!**




An isolation test shall only be performed by personnel aware of the dangers and hazards of the test.

On models with input code ACR, AC, ACW the insulation voltage is 2.5 kVa.c between input and output, input and case. The output to case isolation is 2 kVd.c. on all models. Option E2 can increase this isolation.


If your isolation test equipment cannot supply the AC current, you can perform a DC isolation test with 4000 Vd.c (2500 Va.c. x  $\sqrt{2}$  x 1.1  $\approx$  4000 Vd.c where 1.1 = safety factor).

#### 9.1 DC isolation test output to case

1. Disconnect all cables from the converter.
2. Check *Figure 11* or *Figure 12* to include the alarm relay option. The relay outputs are insulated from output/input/case.
3. Connect the input terminals of the converter to case.
4. Connect the output terminals together.
5. Connect your isolation tester between output and case.
6. Raise the voltage of the isolation tester from 0 to 2000 Vd.c. (With option E2 0 to 4000 Vd.c. ) Check that the leakage current does not exceed 5  $\mu$ A. The voltage should not be applied for more than a few seconds or the Y-capacitors might be damaged.
7. **Turn off the isolation tester and discharge the test voltage with a 10 M $\Omega$  resistor between output and case.**

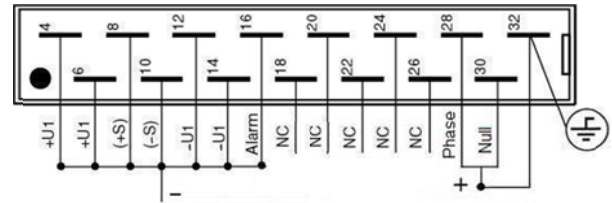

*Figure 11. Output to case isolation voltage test.*

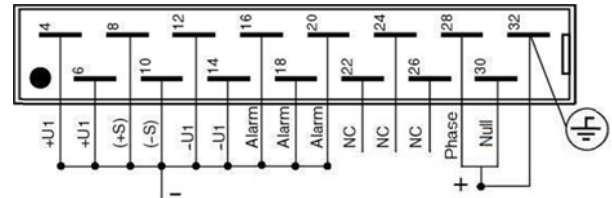

*Figure 12. Output to case with relay alarm isolation voltage test.*

#### 9.2 AC isolation test output to case, option E2

**Beware of the rather high capacitive earth currents (about 100 mA) that will occur during this test.**

1. Disconnect all cables from the converter.
2. Check *Figure 11* or *Figure 12* to include the alarm relay option. The relay outputs are insulated from output/input/case.
3. Connect the input terminals of the converter to case.
4. Connect the output terminals together.
5. Connect your isolation tester between output and case.
6. Raise the voltage of the isolation tester from 0 to 2500 Va.c. The voltage should not be applied for more than one (1) minute or the Y-capacitors might be damaged.
7. **Turn off the isolation tester and discharge the test voltage with a 10 M $\Omega$  resistor between output and case.**




### Warning!


An isolation test shall only be performed by personnel aware of the dangers and hazards of the test.

### 9.3 DC isolation test input to output and input to case

1. Disconnect all cables from the converter.
2. Check *Figure 13* or *Figure 14* to include the alarm relay option. The relay outputs are insulated from output/input/case.
3. Connect the output terminals of the converter to case.
4. Connect the input terminals together.
5. Connect your isolation tester between input and case.
6. Raise the voltage of the isolation tester from 0 to 4000 Vd.c. Check that the leakage current does not exceed 5  $\mu$ A. The voltage should not be applied for more than a few seconds or the Y-capacitors might be damaged.
7. **Turn off the isolation tester and discharge the test voltage with a 10 M $\Omega$  resistor between input and case.**

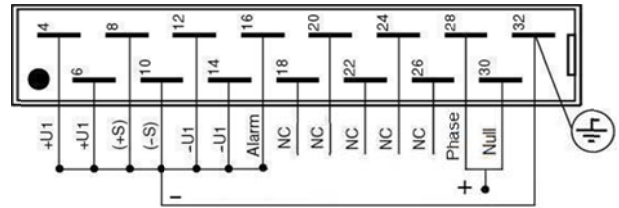

*Figure 13. Input to output and input to case isolation voltage test.*

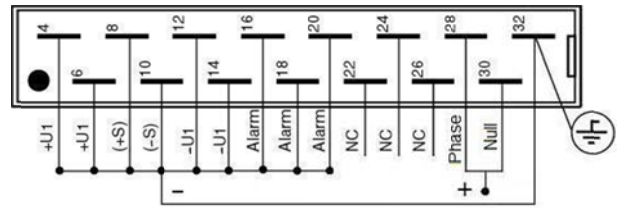

*Figure 14. Input to output and input to case with relay isolation voltage test.*

### 9.4 AC isolation test input to output and input to case

**Beware of the rather high capacitive earth currents (about 100 mA) that will occur during this test.**

1. Disconnect all cables from the converter.
2. Check *Figure 13* or *Figure 14* to include the alarm relay option. The relay outputs are insulated from output/input/case.
3. Connect the output terminals of the converter to case.
4. Connect the input terminals together.
5. Connect your isolation tester between input and case.
6. Raise the voltage of the isolation tester from 0 to 2500 Va.c. The voltage should not be applied for more than one (1) minute or the Y-capacitors might be damaged.
7. **Turn off the isolation tester and discharge the test voltage with a 10 M $\Omega$  resistor between input and case.**

### 10 Trouble shooting

#### 10.1 There is no output voltage

1. Check that the input voltage is within the specified limits.
2. The PSE AC-input series has a built-in fuse not accessible from outside.
  - Measure the input resistance, if open the fuse has blown. The unit has to be replaced by a new unit or be repaired.
3. The Power supply output may be in current limit due to excessive output current or an external short-circuit on the output.
  - Measure the output voltage. If shows  $> 0.5$  V the thyristor OVP, *see section 7.2*, might have triggered.
  - Disconnect the input by an external voltage breaker.
  - Disconnect the load.
  - Connect input fuse again and measure the output voltage. If the converter now starts the load was too heavy or there was a short circuit.
  - If there is an external short circuit, remove it.
  - If the load is too large decrease the load or consult your Polyamp dealer.
4. If still no improvement the unit is broken. Contact your Polyamp dealer.

#### 10.2 Fault report

We do not recommend you to repair a faulty unit. All unit opened by customer will not be repaired under warranty.

**Please use our RMA system from our webpage [www.polyamp.com](http://www.polyamp.com)**

#### Warranty

All Polyamp DC/DC converters are warranted against defective material and workmanship. This warranty is valid for 24 months from the date of delivery. We will repair or replace products which prove to be defective during the warranty period. The warranty is valid only if the converter is used within specification.

Please describe the conditions when the fault occurred and please return a faulty converter to:

**Your local distributor or:**

**SWITCH CRAFT S.A.  
Bel Air 63  
CH-2300 La Chaux-de-Fonds  
Switzerland**

**Tel: +41 32 9678800 Fax: +41 32 9678809  
e-mail: [info@switchcraft.ch](mailto:info@switchcraft.ch)**

**Latest version of this manual  
[www.polyamp.com](http://www.polyamp.com)**